




# HP Chromebook 11 G4 Battery Replacement

Replace the battery of the HP Chromebook 11 G4.

Written By: Christopher Flood

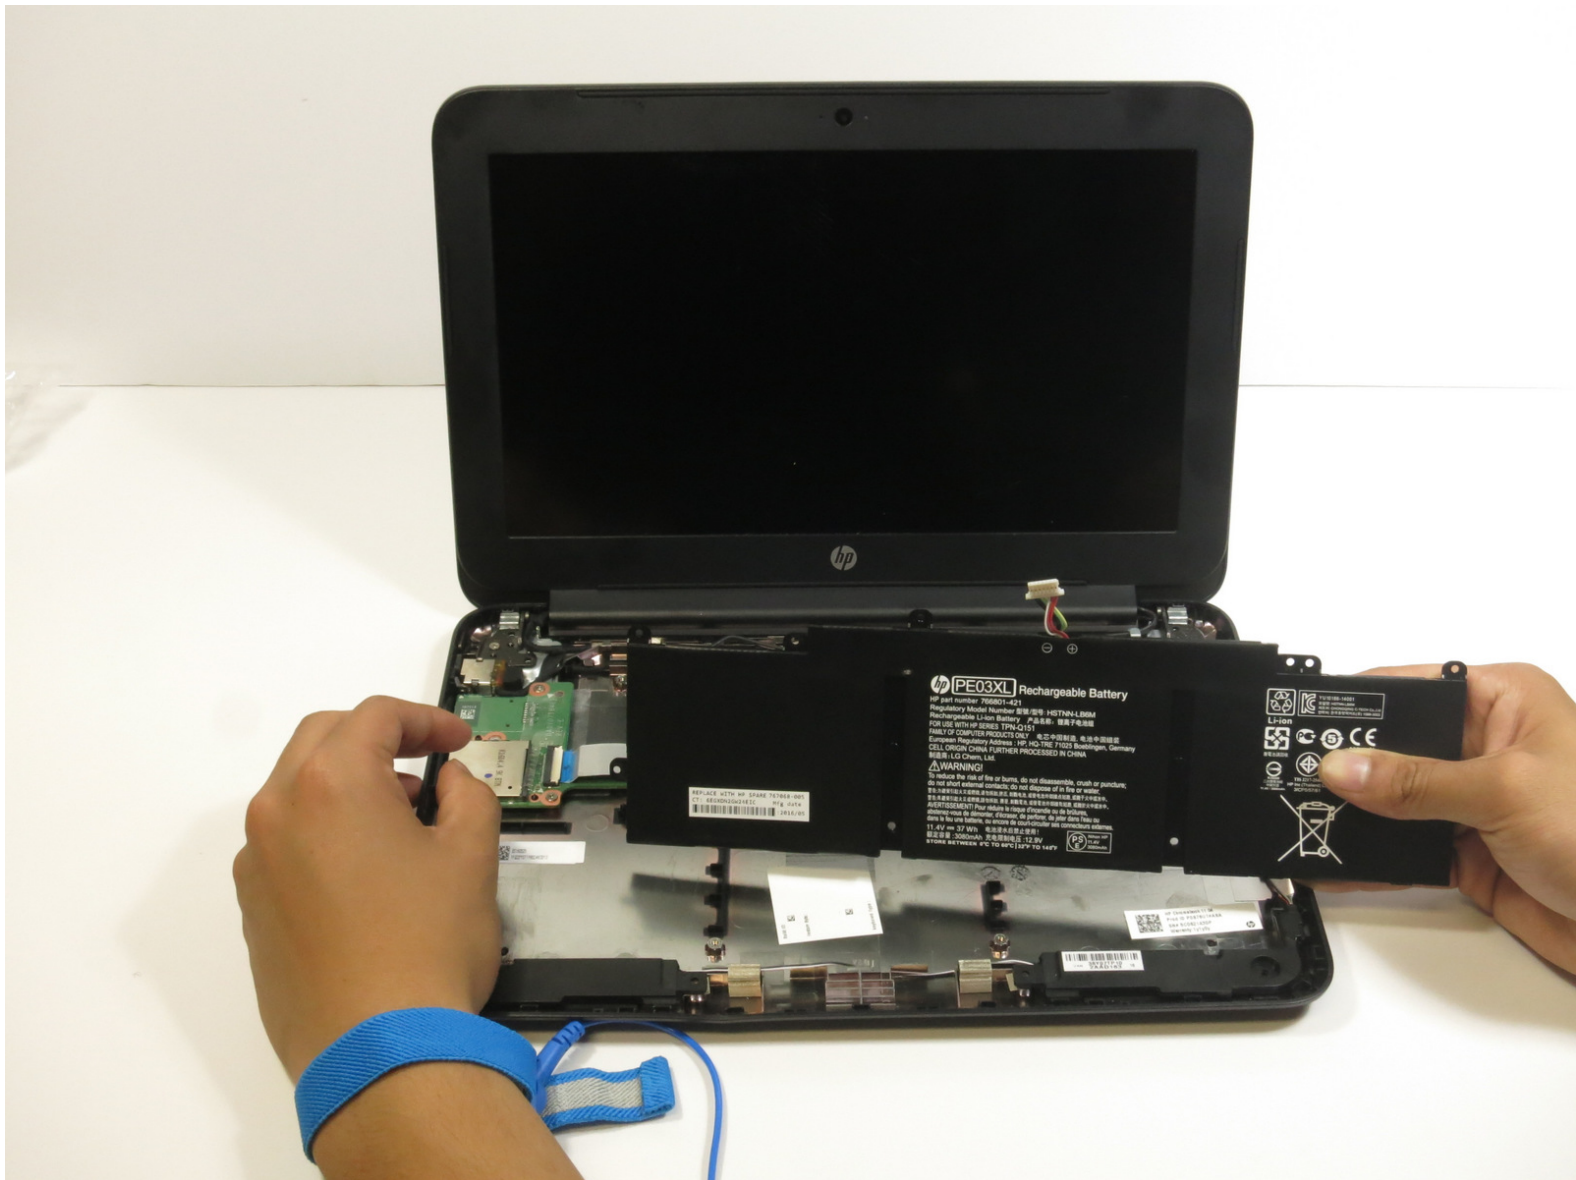

## INTRODUCTION

Sometimes it's necessary to replace a defective battery or remove it to test an AC adapter. This guide shows how to replace the battery of the HP Chromebook 11 G4.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Keyboard



- Position the closed Chromebook with the rubber pads facing up.

## Step 2




- Slide the flat end of the spudger under the rubber pads at the upper right-hand and the upper left-hand corners.
- Pry off the rubber pads to reveal a screw under each pad.



The rubber pads are attached with a strong adhesive. The force applied may damage the pads.

## Step 3

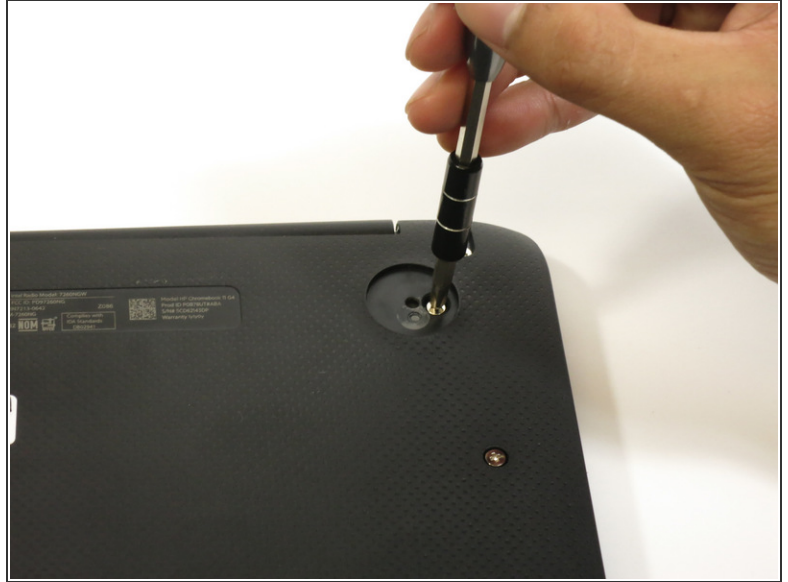

- Remove the eleven 6mm Phillips #1 screws.

## Step 4



- Flip over the Chromebook and open it.




## Step 5





- Insert the flat end of the spudger between the bottom body of the Chromebook and keyboard body.
- Slide the spudger along the gap, applying downward pressure to separate the two components.
- ⓘ You should hear popping sounds as you slide the spudger along the edge.
- ⓘ If the spudger gets stuck while sliding, simply slide the spudger back for a bit, and continue sliding forward.

## Step 6

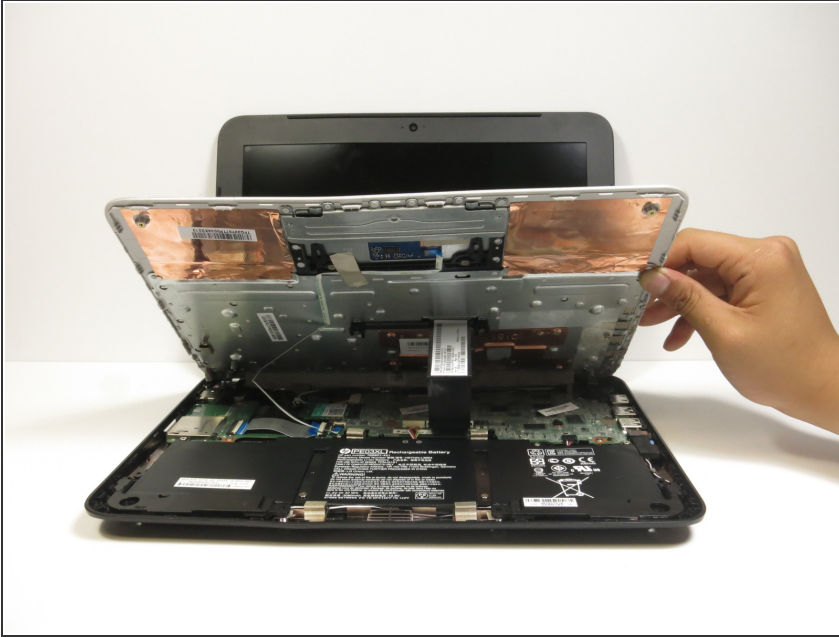

- Lift the bottom of the keyboard assembly to reveal the internal components of the device.

## Step 7

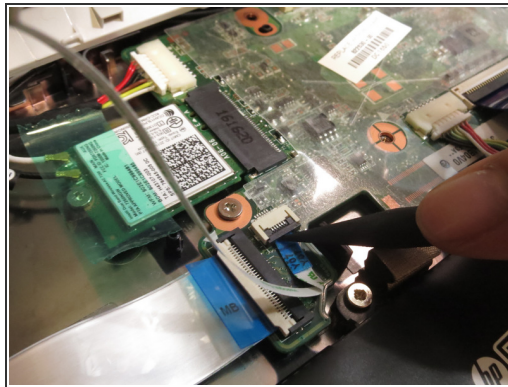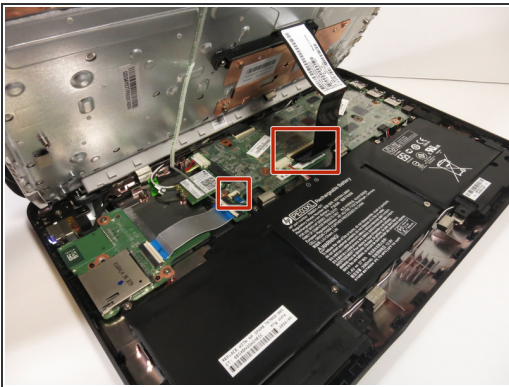

- Use the pointed end of the spudger to flip up the black tabs on the two ZIF connectors located on the motherboard.
- Disconnect the ribbon cables from the motherboard by gently sliding them out of their sockets.





## Step 8




- Remove the keyboard assembly by lifting it off the laptop base.

## Step 9 — Battery

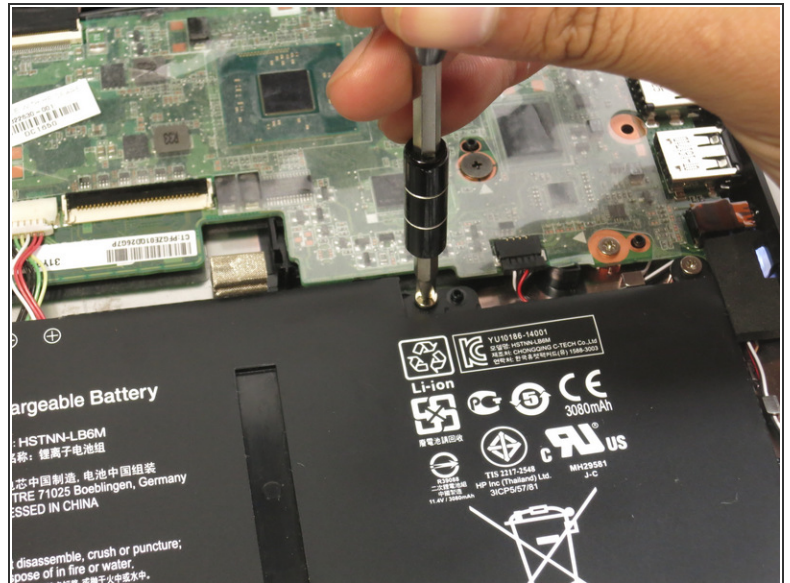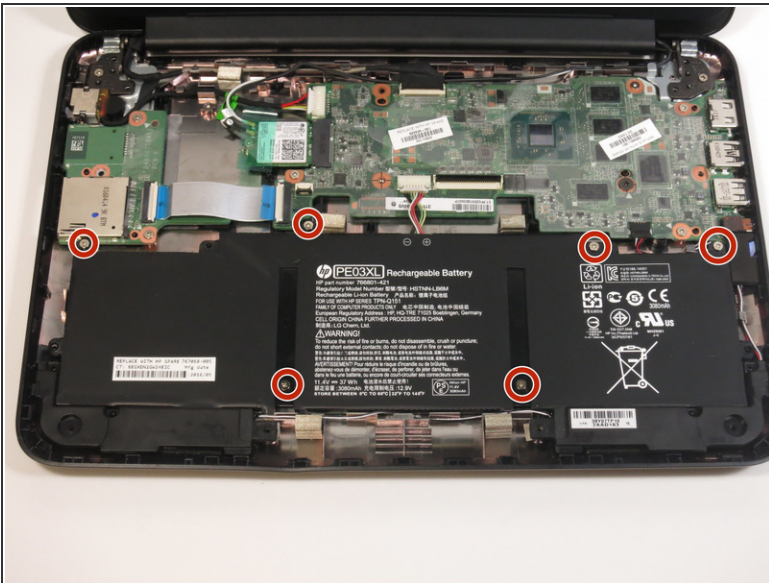

- Remove the six 4mm Phillips #1 screws.

## Step 10

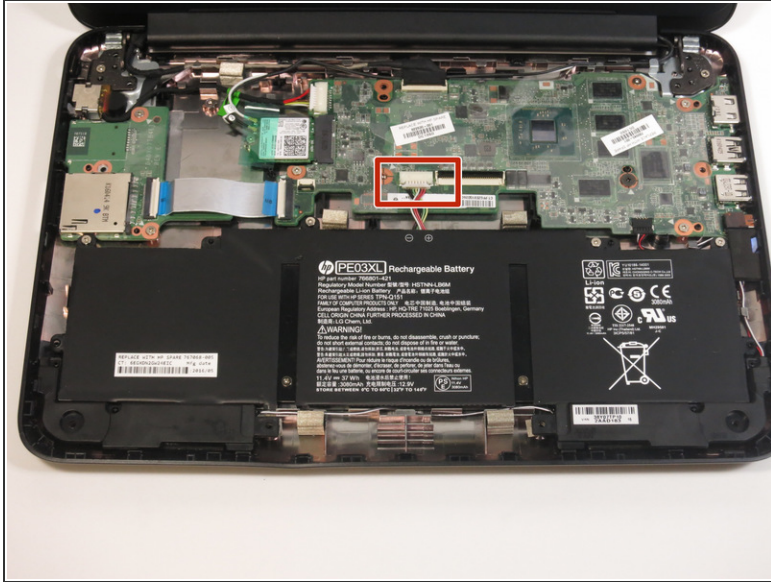

- Disconnect the bundled power cable by grasping both edges with your fingers and pulling.

## Step 11



- Lift the battery out of the laptop.

To reassemble your device, follow these instructions in reverse order.



